


Dish Washer Instructions: The filling and heating phase will take up to 20 minutes before you can use the washer. Each wash cycle then only takes about 3 minutes.

7.3 Preparations for washing

7.3.1 Preparing the machine

- ▶ Check correct position of wash/rinse arms, strainers and if fitted stand pipe.
- ▶ Open site shut-off valve.
- ▶ Turn on main switch or insert the plug.
- ▶ Check level of detergent and rinse aid container. (See section 6.4).
- ▶ Close Door.
- ▶ Press the ON/Escape key .

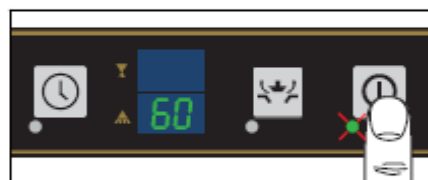

- ↳ During the filling and heating processes, the key LED flashes. This process can take several minutes.
- ↳ As soon as the LED is permanently lit, the machine is ready for operation and displays the current wash temperature in the lower display.

7.3.2 Preparing the washware

- ▶ Remove any food residue.
- ▶ Place wash ware face down in the rack.
- ▶ Rinse off wash ware.

7.4 Washing

- ▶ Slide rack into the machine and close the door.
- ▶ Press the programme selection key to show the current programme in the display. Press the key continuously to choose between 3 programmes (P1 = short, P2 = standard, P3 intensive). This is not possible if an error is displayed and while the programme is running.



- ↳ The LED flashes while the programme is running.
- ↳ As soon as the LED lights up permanently, the rinsing process is complete.
- ↳ With the standard setting, the maximum reached temperatures of the completed washing programme are shown in the display.
- ▶ Open the door and remove the rack.
- ▶ Allow the wash ware enough time to dry.

7.5 Switch off machine

- ▶ Close the door.
- ▶ Press and hold down the drain button (min. 3 seconds).



- ↳ During pump out, the Drain key LED flashes.



During pump out, the machine interior is cleaned automatically. At the end of the programme, the machine switches off automatically. Then remove any coarse food residues.

When the machine has switched off:

- ▶ Turn off main switch or remove the plug.
- ▶ Close on-site shut-off valve.